











BEFORE YOU BEGIN:  
THESE INSTRUCTIONS ILLUSTRATE THE ASSEMBLY AND INSTALLATION OF THE STYLMARK FITTING ROOM. IF YOU HAVE QUESTIONS DURING ASSEMBLY, CALL 800-328-2496 TO REQUEST TECHNICAL ASSISTANCE. SEE STYLMARK FITTING ROOMS & MIRROR KITS CATALOG FOR OPTIONAL COMPONENTS AND ILLUSTRATIONS.

- TOOLS YOU'LL NEED:
- PHILLIPS AND REGULAR SCRENDRIVER
  - HAND DRILL
  - WOOD SCREWS (VARIABLE SPEED PREFERRED WITH PHILLIPS BIT)
  - CHALK LINE

GETTING STARTED:  
THESE INSTRUCTIONS ARE FOR THE ASSEMBLY AND INSTALLATION OF THE STYLMARK FITTING ROOM. A TYPICAL ONE-ROW LAYOUT IS SHOWN (SEE FIGURE 1); HOWEVER, INSTALLATION PROCEDURES CAN BE ADAPTED TO ANY SPACE OR FITTING ROOM CONFIGURATION.

DIVIDER PANEL MOUNTING:  
THE DIVIDER PANELS CAN BE ATTACHED BY FASTENING ANGLE BRACKETS (PART #570004) ONTO THE VERTICAL POSTS AND DIVIDER PANELS. SEE FIGURE 3

- STEP-BY-STEP INSTRUCTIONS:
1. DETERMINE PLACEMENT OF THE MAIN HEADER FOR THE SPACE AVAILABLE AND MARK THE POSITION WITH A CHALK LINE. DIVIDE THE SPACE INTO SPECIFIED FITTING ROOM WIDTHS. SEE FIGURE 5
  2. LOCATE AND SCREW THE WALL JAMBS WITH FASTENERS. SEE FIGURE 6
  3. INSTALL ADJUSTABLE FOOT LEVELERS IN THE BOTTOMS OF THE VERTICAL POST (IF REQUIRED). SEE FIGURE 7
  4. ATTACH VERTICAL POSTS TO DIVIDER PANELS USING ONE OF THE OPTIONS DESCRIBED IN THE DIVIDER PANEL MOUNTING OPTIONS SECTION.
  5. IF YOU ARE INSTALLING CORNER POST FILLER STRIPS (PART #170013) ON THE VERTICAL POSTS BELOW THE DIVIDER PANELS, INSERT THEM UPWARD FROM THE BOTTOM OF THE POSTS BEFORE SECURING THE POSTS INTO POSITION. SEE FIGURE 8
  6. ATTACH THE DIVIDER PANELS WITH VERTICAL POSTS TO THE THE WALL JAMBS WITH FASTENERS. SEE FIGURE 9
  7. ATTACH THE VERTICAL POSTS TO THE FRONT PANELS USING THE SAME METHOD SELECTED IN STEP 4.
  8. ATTACH THE FRONT PANELS WITH VERTICAL POST TO THE POSTS ON THE DIVIDER PANELS. SEE FIGURE 10
  - OPTION: SLIDE OPTIONAL LAMINATE FILLER STRIPS DOWN FROM THE TOP INTO THE VERTICAL POSTS. SEE FIGURE 11
  9. SECURE THE MAIN HEADERS WITH FASTENERS AT THE TOP OF ALL VERTICAL POSTS. SEE FIGURE 12
  - NOTE: THE HEADER MUST BE FASTENED DOWN ON TOP OF EACH POST. DRILL HOLES IN THE HEADER TO ALIGN WITH THE SCREW PORTS IN THE POST. NEXT, CENTER BUTT JOINTS OR MITERED JOINTS OVER A VERTICAL POST.
  10. SECURE DIVIDER HEADERS OVER THE ROOM DIVIDER PANELS USING ANGLE BRACKETS (PART #570004). SEE FIGURE 13
  11. INSTALL ALL ACCESSORIES AND OPTIONAL PARTS.

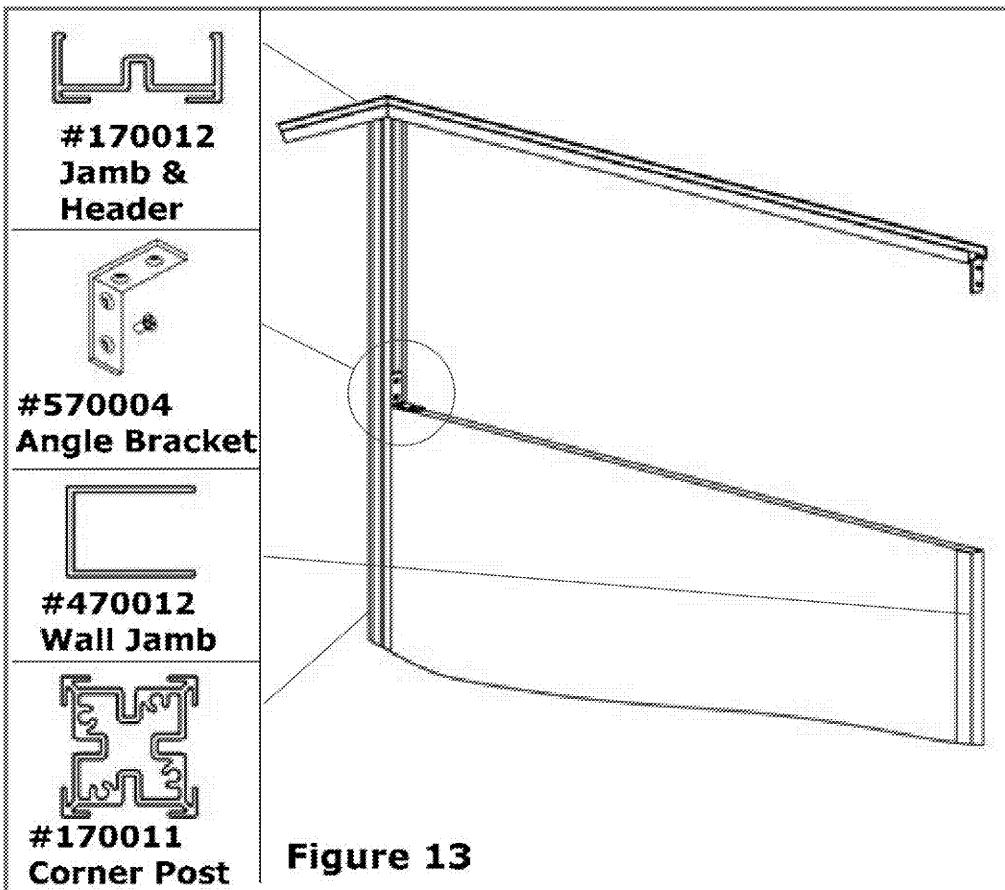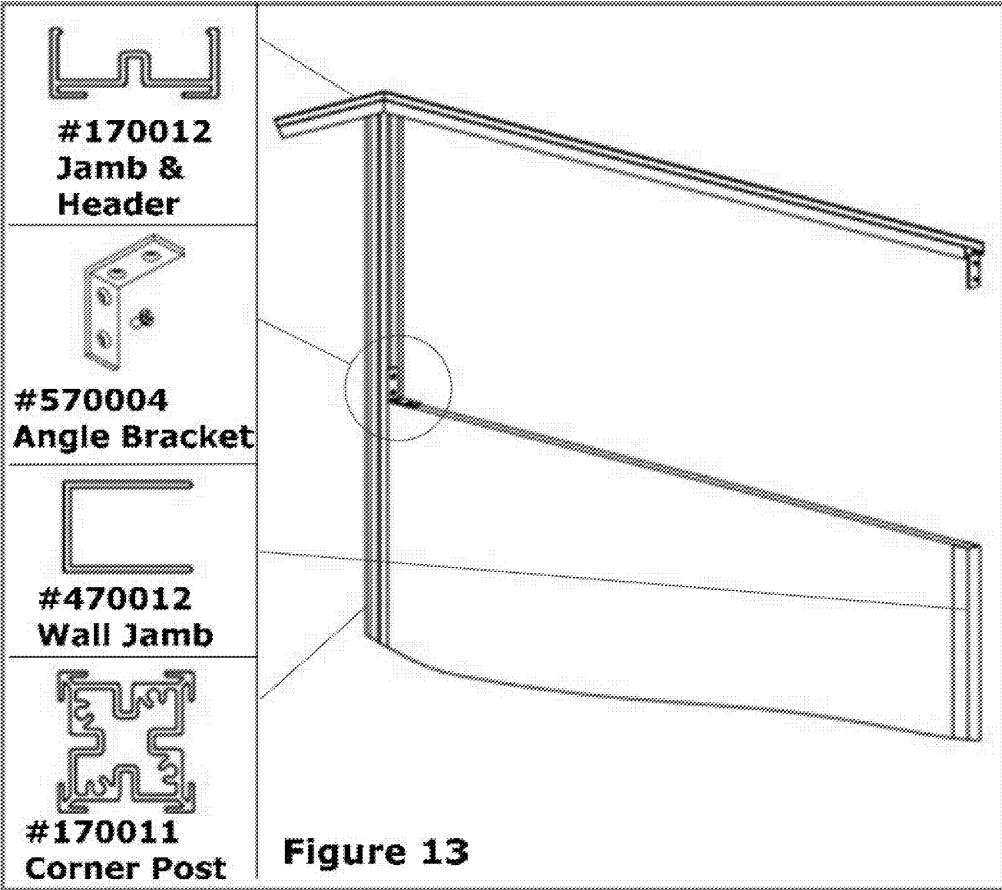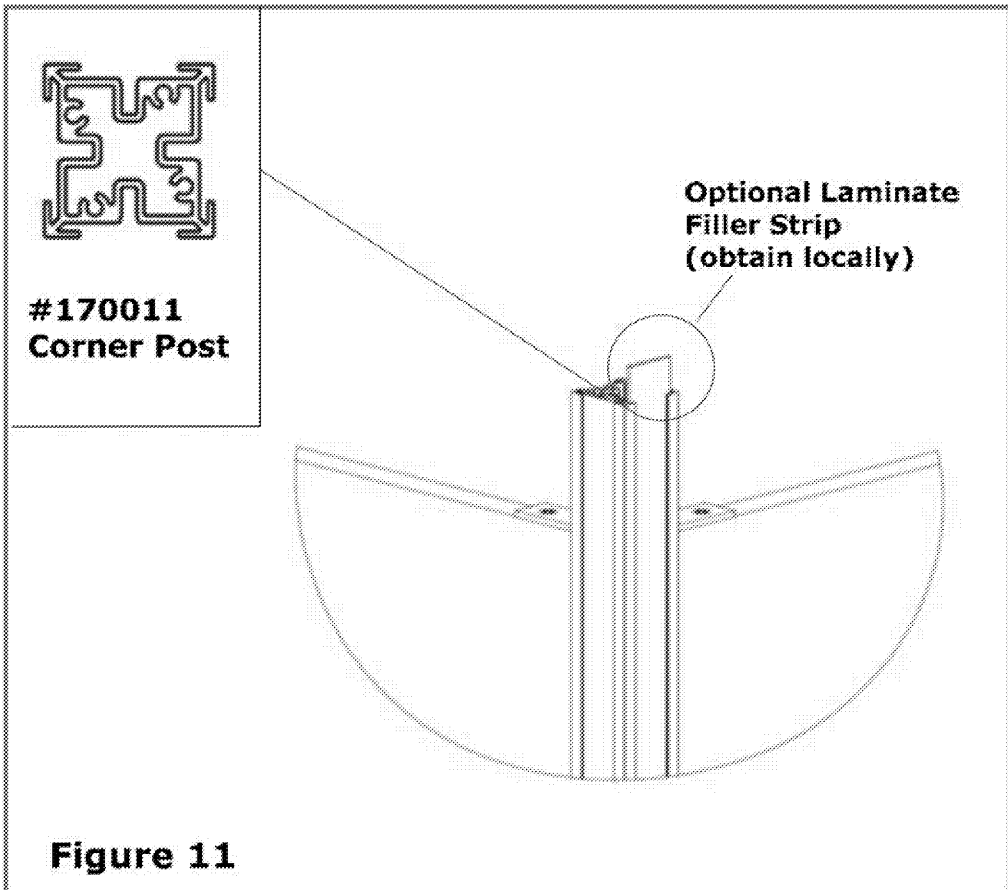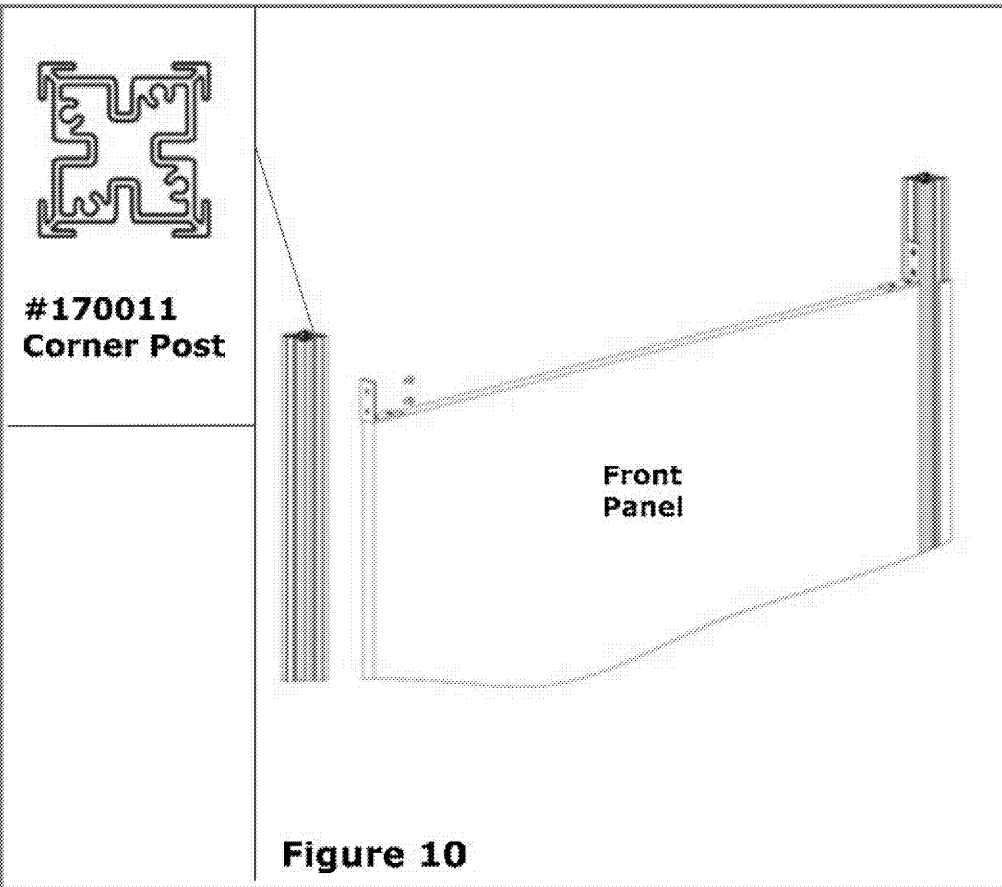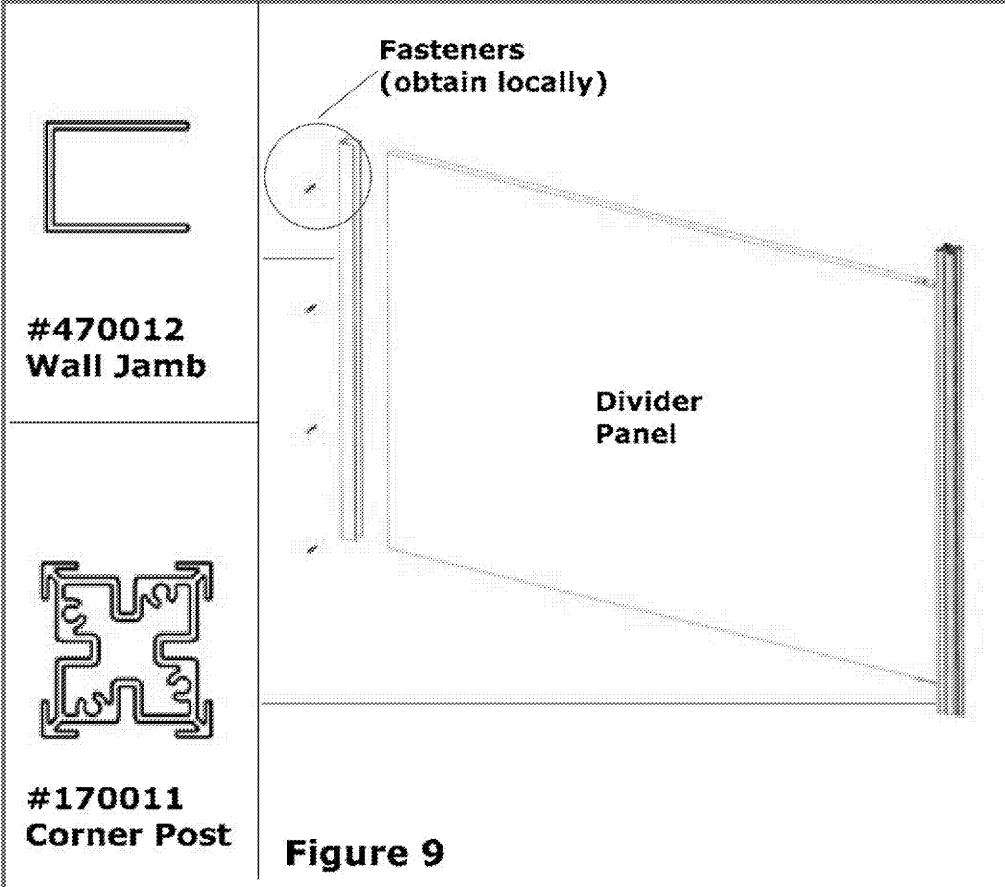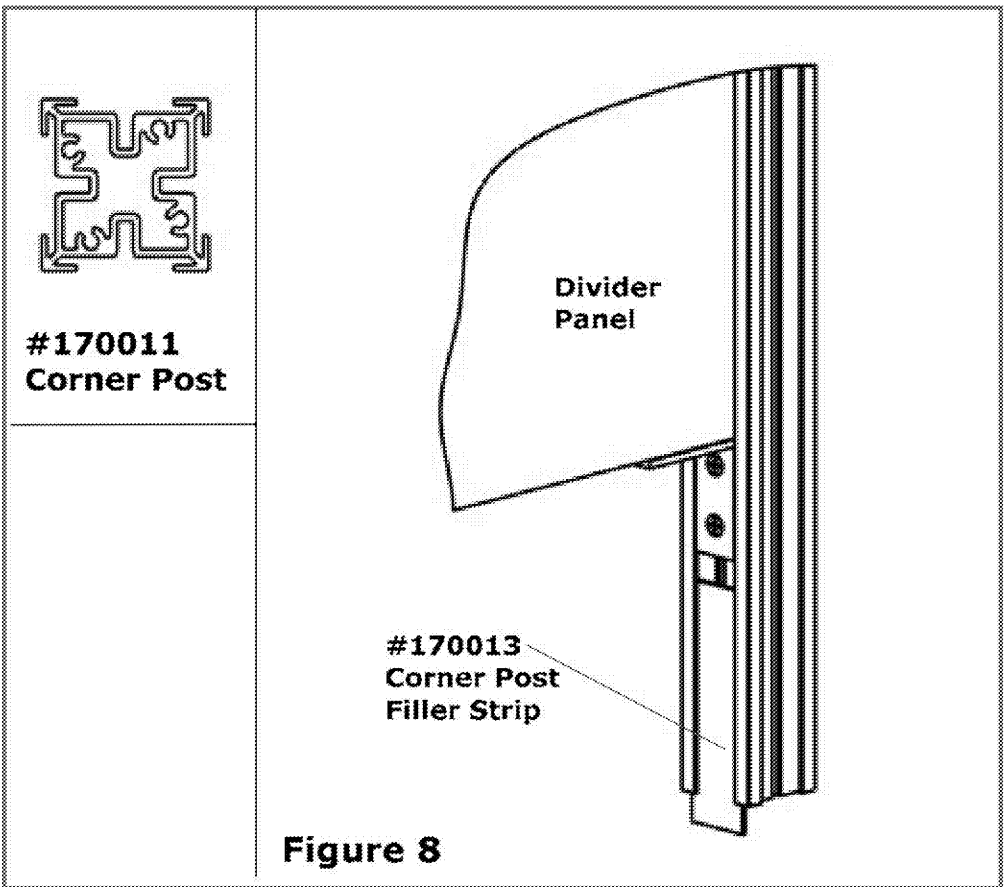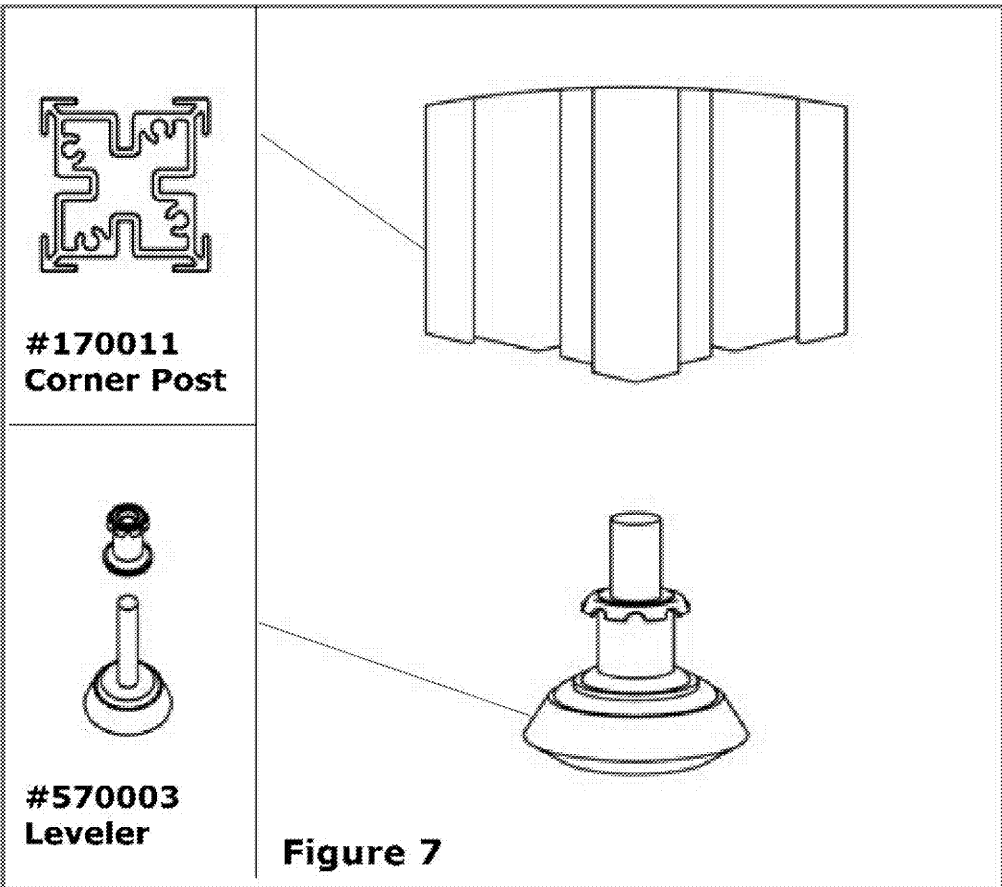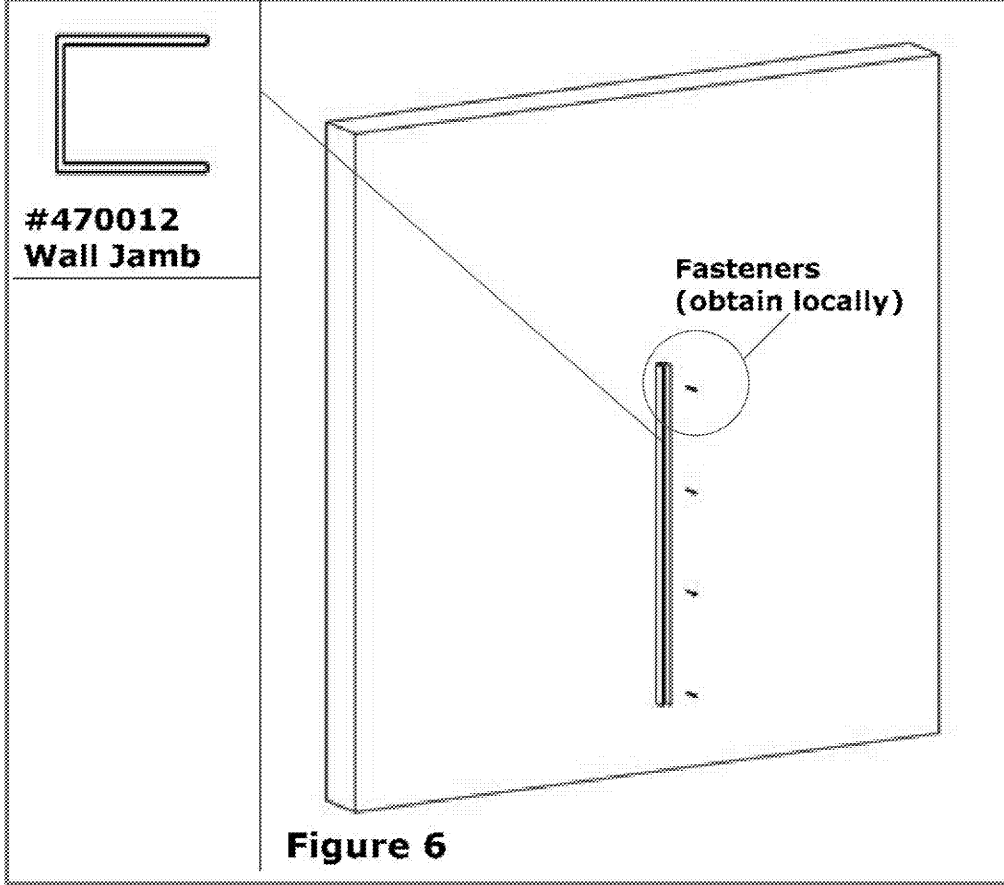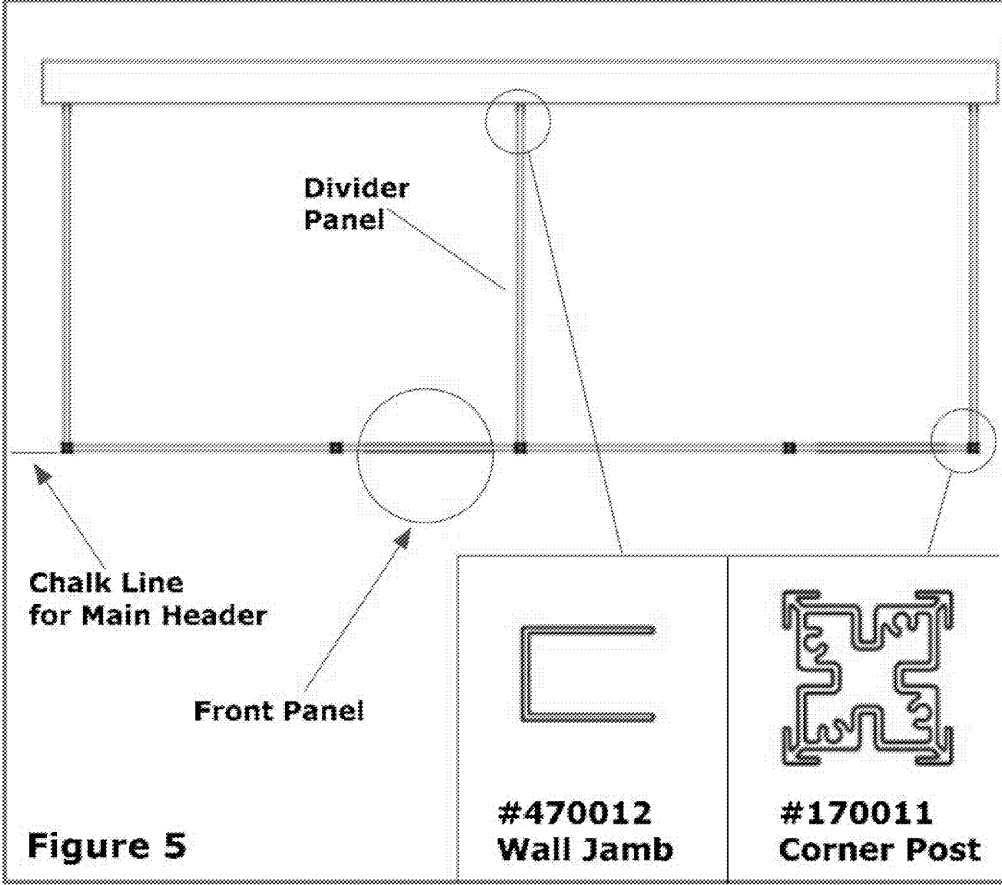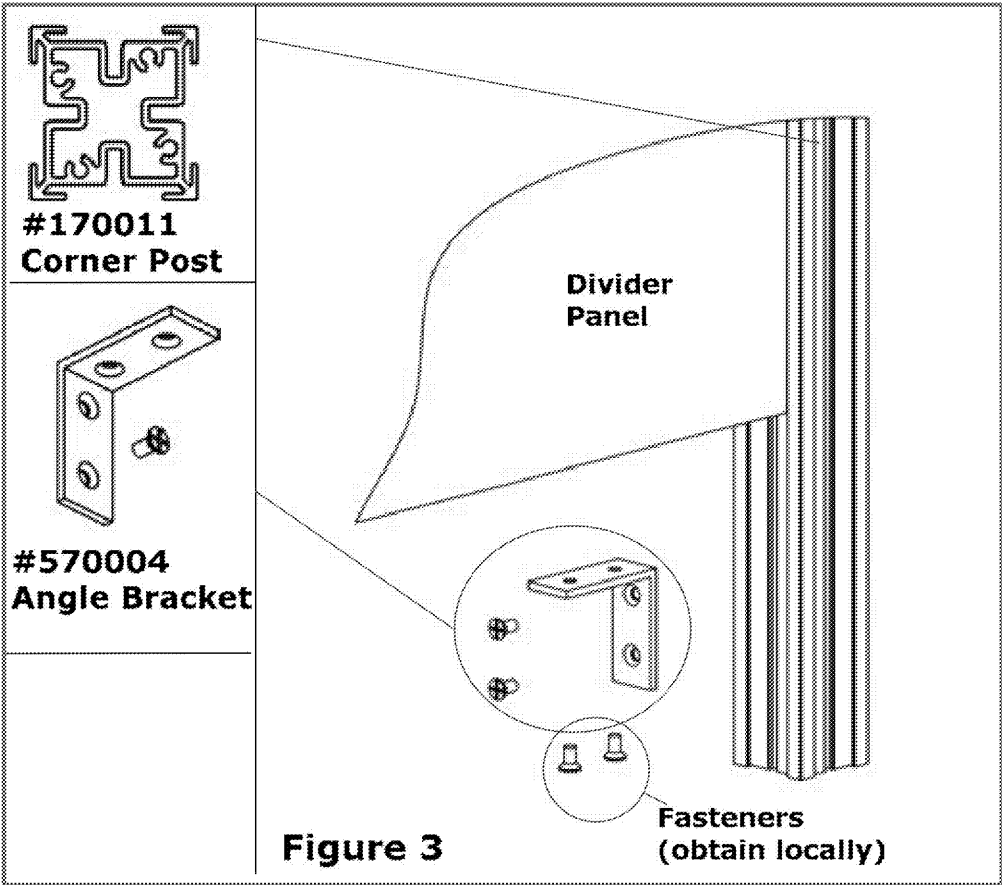

## STEP-BY-STEP INSTALLTION INSTRUCTIONS

R

NOT USED

N

INSTALLATION DETAILS

N.T.S.

-

A

**FRCH**  
DESIGN WORLDWIDE

311 ELM STREET  
SUITE 600  
CINCINNATI, OH 45202  
513 241 3000  
www.frch.com

**chico's**

11215 METRO PARKWAY  
FT. MYERS, FL. 33966

*Soma*

STORE NO:  
5062

PROJECT LOCATION:  
MIROMAR OUTLETS  
10801 CORKSCREW ROAD  
ESTERO, FL 33928  
SPACE #: 407

DESIGN TYPE:

REVISIONS:

REQUIRED BY: DATE

\* INDICATES NO REVISION TO THIS SHEET

DRAWN BY: JSG  
CHECKED BY: JSG

ELITE CONSTRUCTION GROUP  
LAKE JACKSON, TX  
PHONE: 979-285-0712  
NOTE: THESE PRINTS HAVE BEEN REDUCED  
BY 50 PERCENT. SCALE WILL BE 50 PERCENT  
OF WHAT IS NOTED ON PLANS

DRAWING TITLE:  
**FITTING ROOM  
DETAILS**

DATE ISSUED:  
**06/06/2017**

PROJECT NO:  
**034138.000**

DRAWING NO:

**A10.2**